

MC-64K - Memory Cartridge for Roland instruments (Keyboard)

© 2022  SYNTHASTIX

Safety Instructions

1. Do not touch the gold contacts of the circuit board
2. Do not shortcut the gold contacts of the circuit board
3. Do not bend, drop or expose to impact
4. Avoid heat, moisture and direct sunlight
5. Do not force open

Violations render warranty void!



Notes on Handling



1. Make sure that your instrument is turned off.
2. Insert the MC-64 memory cartridge into the **Cartridge Port** of your instrument. The memory cartridge has a coding. So, you cannot insert it in the wrong way.
3. The cartridge is correctly inserted when the dotted line on the label is at the height of the instrument housing.
4. Turn on your instrument now. The currently selected bank will be displayed.
5. To switch between the 64 banks, use the buttons to the left and right of the 7-segment-display of the cartridge. You can switch the bank on the fly. You do not have to turn off the instrument. The cartridge has an integrated write protection. It is always active when the cartridge starts. You can recognize the active write protection by the illuminated dot at the top left of the 7-segment display. To deactivate the write protection, press both buttons for 5 seconds. The dot disappears and the write protection is deactivated.
6. Especially if the bank used was previously used for another device or if there are already other data in the bank, it may happen that the device issues an error message when writing to the cartridge. In this case, simply repeat the writing process (e.g. three times for the JX-10).
7. This module was designed especially for Roland keyboard units, but technically it works in all other units as well.

Do not open the cartridge, you could damage the electronics. The cartridge does not need a backup battery!