

PC242 - Memory Cartridge for the Prophet VS Keyboard

© 2019  SYNTHASTIX

Safety Instructions

1. Do not touch the gold contacts of the circuit board
2. Do not shortcut the gold contacts of the circuit board
3. Do not bend, drop or expose to impact
4. Avoid heat, moisture and direct sunlight
5. Do not force open

Violations render warranty void!



Notes on Handling



1. Make sure that your Prophet VS is turned off.
2. Insert the PC242 memory cartridge with the label facing you into the **Cartridge Port** of the Prophet VS. Please note that, since the slot does not have a guide for the cartridge, you need a little feeling when inserting it.
3. The cartridge is correctly inserted when the writing "RAM CARTRIDGE" is just above the front panel of the Prophet VS.
4. Turn on your Prophet VS now.
5. The display of the cartridge will flash three times and display the firmware version. When the flashing stops, the currently selected bank will be displayed.
6. Press the [**Cartridge**] button on the Prophet VS. The red LED of the button confirms the selection of the cartridge. The memory bank currently selected on the cartridge is now active.
7. To switch between banks, use the buttons to the left and right of the 7-segment-display of the cartridge. You can switch the bank on the fly. You do not have to turn off the Prophet VS.
8. When switching a bank, it may happen that the Prophet VS deactivates the selection of the cartridge. In this case, simply select the cartridge again.
9. If you cannot select the cartridge, the currently selected bank may be virgin. To initialize a virgin cartridge bank hold [**Enter**] & press [**8**].

Do not open the cartridge, you could damage the electronics. The cartridge does not need a backup battery!



support@waverex.de



waverex.de



shop.waverex.de



waverexboard



WaveReX